AC current monitoring in 1-phase mains

E1IM1AACL10

Monitoring relays - ENYA series Multifunction 1 change over contact Width 17.5 mm Installation design



Technical data

1. Functions

AC current monitoring in 1-phase mains with adjustable thresholds, adjustable hysteresis, adjustable tripping delay and the following functions which are selected by means of rotary switch:

OVER	Overcurrent monitoring			
UNDER	Undercurrent monitoring			
WIN	Monitoring the window between Min and Max			
OVER+Latch	Overcurrent monitoring with fault latch			
UNDER+Latch	Undercurrent monitoring with fault latch			
WIN+Latch	Monitoring the window between			
	Min and Max with fault latch			

2. Time ranges

 Start-up suppression time (Start):

 Tripping delay (Delay):
 0,1 to 10s

3. Indicators

Green LED ON/OFF: indication of supply voltage Red LED ON/OFF: indication of failure of the corresponding threshold Red LED flashes: indication of tripping delay of the corresponding threshold Yellow LED ON/OFF: indication of output relay

4. Mechanical design

Self extinguishing plastic housing, IP rating IP40 Mounted on DIN rail TS 35 according to EN 60715 Mounting position: any Shockproof terminal connection according to VBG 4 (PZ1 required), IP rating IP20 Tightening torque: max. 1Nm Terminal capacity: 1 x 0.5 to 2.5mm² with/without multicore cable end 1 x 4mm² without multicore cable end 2 x 0.5 to 1.5mm² with/vithout multicore cable end 2 x 2.5mm² flexible without multicore cable end

230V AC

-15% to +15% of U

Li-N

5. Input circuit

Supply voltage: Terminals: Tolerance: Rated consumption: Rated frequency: Duration of operation: Reset time: Wave form: Hold-up time: Drop-out voltage: Overvoltage category: Rated surge voltage:

5VA (0,8W) AC 48 to 63Hz 100% 500ms Sinus ->20% of rated voltage III (in accordance with IEC 60664-1) 4kV

6. Output circuit

 1 potential free change over contact Rated voltage:
 250V

 Switching capacity:
 1250V

 Fusing:
 5A fas

 Mechanical life:
 20 x 1

 Electrical life:
 2 x 10

 at 100
 Switching frequency:

Overvoltage category: Rated surge voltage:

7. Measuring circuit

Measuring variable: Measuring input: Terminals: Overload capacity: Starting current: 1s 3s Input resistance: Switching threshold U_s:

Hysteresis H:

Overvoltage category: Rated surge voltage:

8. Accuracy

Base accuracy: Adjustment accuracy: Repetition accuracy: Voltage influence: Temperature influence:

9. Ambient conditions Ambient temperature:

Storage temperature: Transport temperature: Relative humidity:

Pollution degree:

10. Weight Single packing: Package of 10pcs: 250V AC 1250VA (5A / 250V AC) 5A fast acting 20 x 10⁶ operations 2 x 10⁵ operations at 1000VA resistive load max. 6/min at 1000VA resistive load (in accordance with IEC 60947-5-1) III (in accordance with IEC 60664-1) 4kV

AC sinus, 48 to 63Hz 1A AC Li, Lk 2A 10A 5A 47m Ω see table ordering information or printing on the unit see table ordering information or printing on the unit III (in accordance with IEC 60664-1) 4kV

≤5% of nominal value ±5% of nominal value ≤2% of nominal value

≤0.1% / °C

-25 to +55°C (in accordance with IEC 60068-1) -25 to +70°C -25 to +70°C 15% to 85% (in accordance with IEC 60721-3-3 class 3K3) 2 (in accordance with IEC 60664-1)

72g 655g per package

E1IM1AACL10

Functions

Overcurrent monitoring (OVER, OVER+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is below the Max-value. When the measured current exceeds the Max-value, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

OVER:

The output relay R switches into on-position again, if the current falls below the Min-value.

OVER+Latch:

The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is below the Max-value.

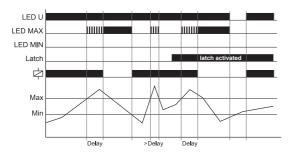

Window function (WIN, WIN+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is within the adjusted window. When the measured current leaves the window between Min and Max, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

WIN:

The output relay R switches into on-position again, if the current re-enter the adjusted window.

WIN+Latch:

The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is within the threshold values.

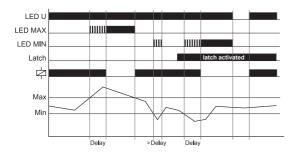

Untercurrent monitoring (UNDER, UNDER+Latch)


When the supply voltage U is applied, the output relay R switches into on-position, if the measured current is beyond the Min-value. When the measured current falls below the Min-value, the output relay R switches into off-position after the interval of the tripping delay (Delay) has expired.

UNDER:

The output relay R switches into on-position again, if the current exceeds the Max-value.

UNDER+Latch:


The output relay R switches only into on-position again by interrupting and re-applying of the supply voltage, provided that the measured current is beyond the Min-value.

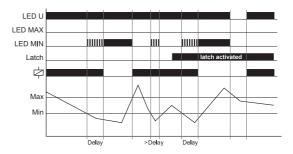

E1IM1AACL10

Connections

Dimensions

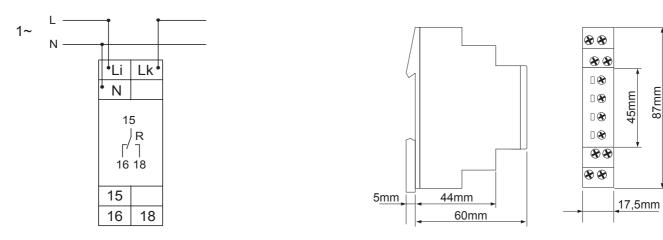

Ordering information

Туре	Rated voltage U _N	Functions	Switching thresholds I _s	Tripping delay (Delay)	Hysteresis	Art. No.
E1IM1AACL10 230V AC	230V AC		Max: 10% to 100% of I _N Min: 5% to 95% of I _N	0.1 of 10s	adjustable	1340203



TELE Haase Steuergeräte Ges.m.b.H. Vorarlberger Allee 38 AT-1230 Vienna, AUSTRIA

RELEASE 2018/05

Subject to alterations and errors

